

Communications Menu in TS



1. Settings:

- Opens the communication settings for TS. This option allows you to adjust parameters related to the connection between your computer and the ECU, such as baud rate or COM port if needed.

2. Data Rate:

- Adjusts the data rate for the connection, which can influence how quickly data is transmitted and received from the ECU. Higher data rates provide faster updates but may impact stability depending on connection quality.

3. GPS Configuration:

- Allows you to configure GPS settings if your setup includes GPS data. This can be useful for logging location-based data in addition to engine parameters, often used in performance or tracking applications.

4. Mini Terminal:

- Opens a terminal interface within TS, allowing for direct communication with the ECU via commands. This can be helpful for advanced users needing to troubleshoot or send specific instructions to the ECU.

5. Comm Debug Log:

- Enables the communication debug log, which records details of the ECU-to-TS communication. This is valuable for troubleshooting communication issues or understanding data transmission behaviors.