


Vehicle Information Settings Window

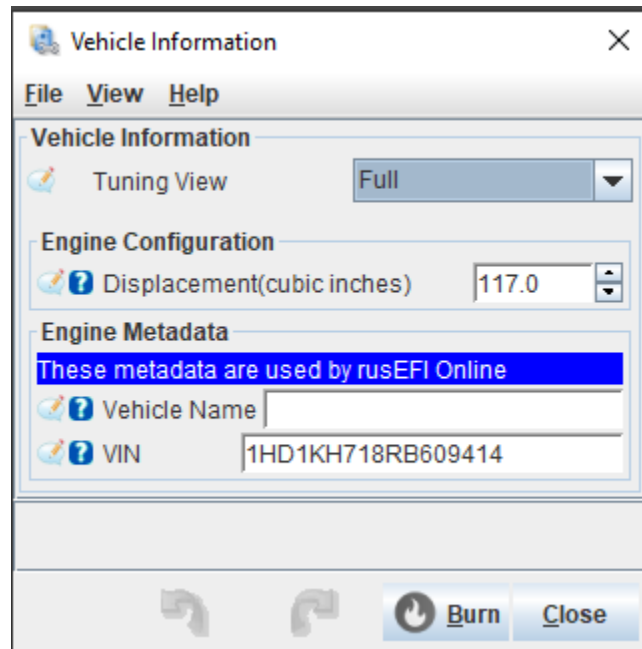

1. Tuning View:

- **This dropdown lets you choose the complexity of the settings display.** For most users, the Tuning layout is recommended as it hides some less commonly used buttons, creating a cleaner interface. However, we will explain everything using the Full layout in this manual to ensure clarity.

2. Engine Configuration

- **Displacement (Cubic Inches):** Enter the engine displacement in Cubic Inches, an essential input for calculating air-fuel ratios and other tuning parameters.

****NOTE: Some older versions of firmware still have displacement in liters, please make note of this and use the correct value**

3. Engine Metadata:

- These fields are primarily used to provide additional context, though they aren't necessary for basic Impact ECU functionality.

- **Vehicle Name:** A custom name for the vehicle (e.g., "Chris's Harley"), useful if managing multiple vehicles.

- **VIN:** in newer firmware versions the VIN input box is located here, input your VIN in all caps to get rid of any "VIN ERR" on your bike's dash